

Battery Internal Resistance Tester

Item Number: BC-08



Introduction

The main function of the battery internal resistance tester is to test the charging function, discharging function, internal resistance, voltage, protection function, capacity, overcurrent, and short circuit protection time.

[Learn More](#)

Function	Range	Measuring range	Resolution	Measurement time	precision
Internal resistance	200mΩ	2-200mΩ	0.1mΩ	10mS	±0.5mΩ
	2Ω	1mΩ-2Ω	1mΩ	10mS	± 1mΩ
Voltage	5V	0-4.999V	0.001V	10mS	±0.001V
	50V	0-49.99v	0.01V	10mS	±0.01V